
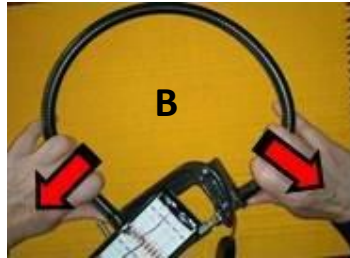


Instructions

The LadyBug Family from CaberLight

UNPACKING:

Remove (and save) the *Ladybug Cocoon* sleeve (a small cotton sock) which protects the *Light Head*. Grasp your *LadyBug* clamp and uncurl it as shown. (A & B)


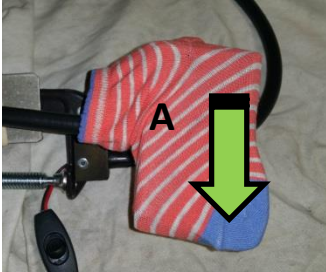


SETTING UP:

Open the *Clamp* jaws far enough to clamp to the display table, and hand tighten the *Clamp* to the table. Turn it on and aim the *Ladybug* as desired. (C.)



WIRE GRID PANELS: The big clamp has a groove which allows the LadyBug to be clamped directly to wire grid panels (D.) Slip the clamp through the Grid Panel, and align the groove with a vertical Grid wire (E.) Tighten the clamp firmly to the wire (F.) Turn it on and aim it (G.)

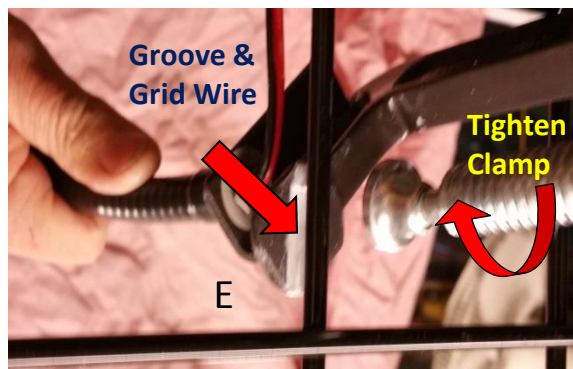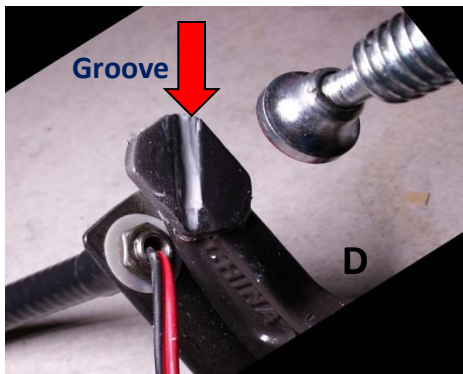


SHIMS:

If your table has an uneven surface on the top or bottom or the table is really flimsy, sandwich the *Shims* between the *Clamp* jaws and the table. (H)
The SHIMS also work well on Wire Shelves (J.)



POWERING UP:

Your *Ladybug* can be powered by either a *LadyBug Single Power Supply* (K) or a *LadyBug 6-Pack Power Supply* (L.) A *LadyBug Battery Adapter* (M,) plus your 12v battery can power a single *LadyBug* directly, or up to 6 through the wiring harness of a *LadyBug 6-Pack Power Supply* (N.) Plug in your *Ladybug* (P) and turn it on.

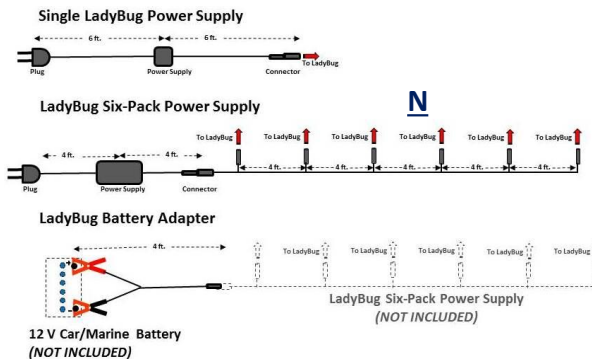

PACKING UP:

Turn off and unplug the *LadyBug*. Unclamp it from the display table, and close the clamp for more compact packing. Rotate the *Light Head* so it is parallel with the clamp. Grasp the *LadyBug Clamp* with one hand and the *Gooseneck* near the *Light Head* with the other, and curl it up until the *Light Head* is over the clamp. Replace the *Cocoon*, and pack it in the box or your luggage with your power (Q,R) and go home!

